

TOTE-REMOTE BUTTON FUNCTIONS IN POWERPOINT®



WHEN PUSHING BUTTONS, BE SURE TO USE A GENTLE TOUCH!

Advance Slide – Push wheel button DOWN one time (push down, not in).

Reverse Slide – Push wheel button UP one time (push up, not in).

Laser Pointer – Push laser pointer button.

Lock and Unlock (Turn Off and On) Remote Control - Push and hold laser pointer button, push wheel button IN, and then release both buttons.

Black Screen – Push and hold heart-shaped button for approximately three seconds. Do the same to exit black screen and return to original slide, or use Advance Slide function (push wheel button down one time) to advance directly to next slide.

White Screen – Push and hold heart-shaped button, push wheel button UP one time, then quickly release both buttons. Do the same to exit white screen, or use Advance Slide function (push wheel button down one time) to advance directly to next slide.

F5 (Enter Slideshow) – Push heart-shaped button (when in normal view).

Esc (Exit Slideshow) – Push and hold heart-shaped button, push wheel button DOWN one time, then quickly release both buttons.

Change Between Page Up/Down Mode and Arrow Up/Down Mode – Push wheel button IN one time.

Alt-Tab (Toggle Screens) – Push and hold heart-shaped button, push wheel button IN, then quickly release buttons.

TOTE-REMOTE BUTTON FUNCTIONS IN POWERPOINT®

Reset ID Code – First lock the remote control (see above). Then push and hold laser pointer button and push and hold wheel button DOWN. The laser pointer button will illuminate. Do not release buttons until laser pointer stops illuminating. After you release buttons, laser pointer button will blink several times to confirm ID code has been reset. Unlock the remote control. Finally, follow “Program ID code” instruction below.

Program ID Code – Use end of paperclip to push red button on receiver one time (it will make a click sound), then push the wheel button on remote control DOWN one time. Receiver must be plugged into USB port, and computer must be powered on, when you do this procedure.

Disable Laser Pointer – First lock the remote control (see above). Then push and hold laser pointer button and push and hold wheel button UP. The laser pointer button will illuminate. Do not release buttons until laser pointer button stops illuminating. After you release buttons, laser pointer button will blink several times to confirm laser pointer has been disabled. Unlock the remote control (same procedure as locking remote control). To re-enable laser pointer, repeat entire same procedure.